

## HOW TO SET MODES ON THE PANNOMATIC

The Pannomatic can work in two modes by inserting one credit:

### Mode 1 (fig.1)

It provides 2 dry wipes (P4) or 1 wet wipe (P1 – P2 – P3)

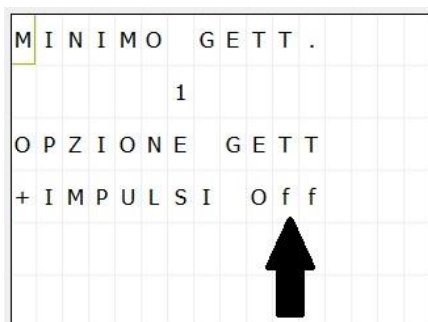


fig.1

### Mode 2 (fig.2)

**A)** A wet cloth is dispensed (P1 – P2 – P3), the blinking green light turns on and the provided cloth has to be teared. The green credit light “ok” remains on and fixed and there is the possibility to dispense another wet cloth (P1-P2-P3) or 2 dry ones (P4).

**B)** Two dry clothes are dispensed (P4), the blinking green light turns on and, after tearing both of them, the green credit light “ok” remains on and fixed and there is the possibility to dispense another two dry clothes (P4) or a wet one (P1 – P2 – P3).

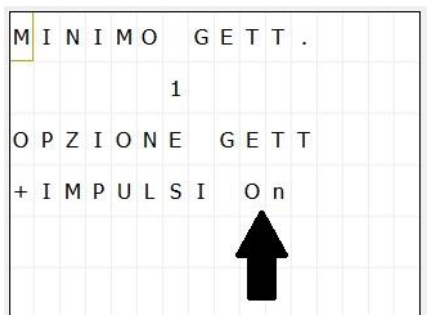



fig.2

### To sum up:

**Mode 1:** 1 wet cloth (P1 – P2 – P3) or 2 dry clothes (P4).

**Mode 2:** 1 wet cloth (P1 – P2 – P3) + 1 wet cloth (P1 – P2 – P3)  
1 wet cloth (P1 – P2 – P3) + 2 dry clothes (P4)  
2 dry clothes (P4) + 2 dry clothes(P4)


**HOW TO SWITCH FROM MODE 1 TO MODE 2 (TOKENS + IMPULSES OPTION)**

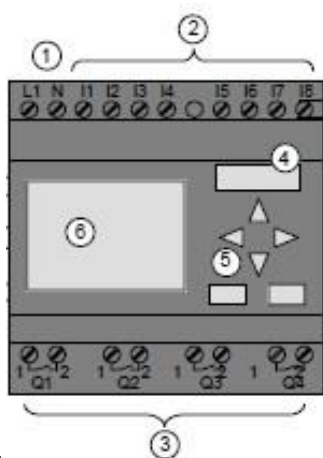

- |                                      |
|--------------------------------------|
| 1. Electricity supply                |
| 2. Inputs                            |
| 3. Outputs                           |
| 4. Modules with coverage compartment |
| 5. Control panel                     |
| 6. LCD display                       |

**FIG 1**

1. On the LCD display (6-FIG 1) with the buttons ▲ ○ ▼ (5-FIG 1) go to the following page:

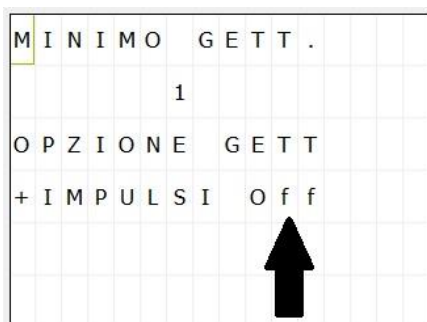


**FIG 2**

**MODIFY FROM OFF TO ON**

- Press **ESC** for 3 seconds, this “-“ will appear next to the number of the tokens minimum
- With the buttons ► ◀ go to **OFF**
- Press **OK**.
- With the buttons ▲ ▼ go to **ON**
- Press **OK** and then press **ESC**.

**AT THE END OF THE MODIFY, THIS IS WHAT IT WILL BE WRITTEN ON THE DISPLAY: ( FIG 3 )**

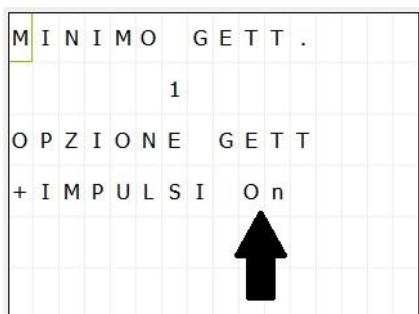

**FIG 3**