



A - RED LIGHT ON



1. CHECK THE WORKING OF THE SENSOR AT END ROLL (RED LED ON THE SENSOR MUST BE OFF WHEN THE PAPER ROLL IS INSIDE THE MACHINE) THE WHEEL MOUNTED ON THE BEAM MUST BE ON THE PAPER ROLL

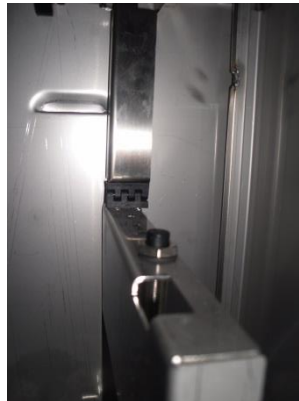

2. CHECK THE WORKING OF THE PHOTOCELL UNDER THE ROLLS. (IT MUSN'T BE OBSCURED BY THE PAPER ROLL AND THE RED LED MUST BE OFF). CHECK THAT THE FRONTAL GLASS OF THE PHOTOCELL IS CLEAN.

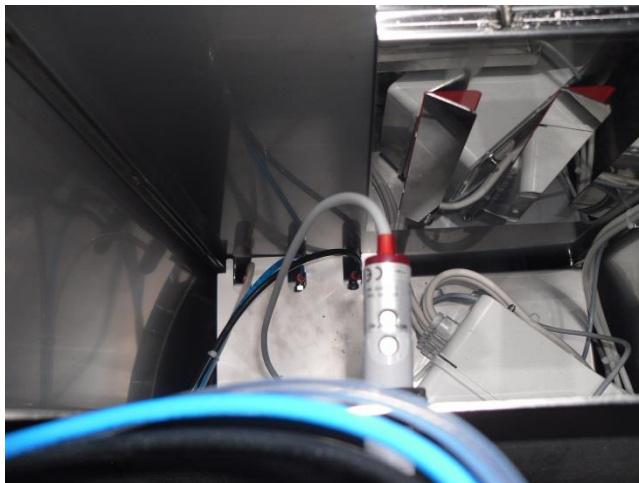

3. CHECK THE WORKING OF THE LEDS IN FRONT OF THE ROLLS (TIRE OUT THE CLAMP ON THE CARD INSIDE THE SWITCHBOARD). IF THE LIGHT SWITCHES OFF THE PROBLEM IS THE LEDS. IT' S IMPORTANT TO CHECK THE WORKING OF LEDS WITH CLOSED DOOR. SUN RAYS COULD AFFECT THE WORKING.

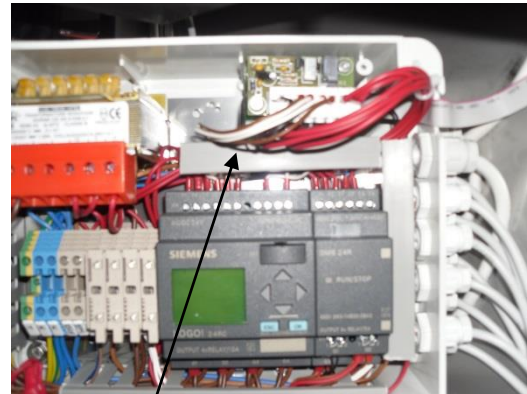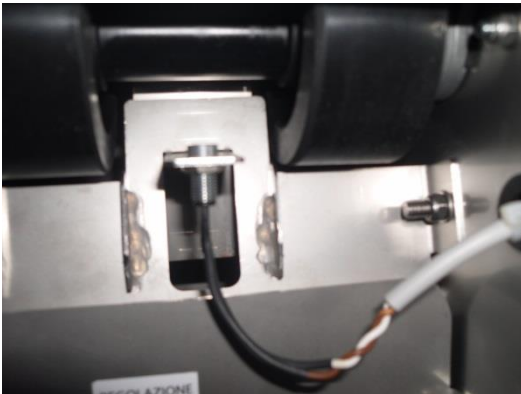

TIRE OUT THE WHITE CONNECTOR

ONCE YOU HAVE DONE THESE 3 TESTS, WE KINDLY WAIT FOR YOUR RESULT

