

## ANOMALY: GREEN LIGHT BLINKING ON PANNOMATIC-N 2018

1. If between the photodiodes there is no towel and the green light is stil blinking, you should check the photodiodes because probably they don't see each other.

### WARNING

During the check phase of the photodiodes, there must be credit inserted in teh machine (green led light steady).

GREEN LIGHT BLINKING	
CAUSE	SOLUTION
PHOTODIODES DIRTY	CLEAN THE PHOTODIODES AND THE HOLE OF THE SUPPORT OF THE TRANSMITTER PHOTODIODE (THE WHITE ONE).



FIG 1



FIG 2



FIG 3



FIG 4

<b>GREEN LIGHT BLINKING</b>	
<b>CAUSE</b>	<b>SOLUTION</b>
CARD OF THE PHOTODIODES WITHOUT POWER ON	CHECK THE POWER (PLEASEE SEE THE ELECTRICAL DIAGRAM)

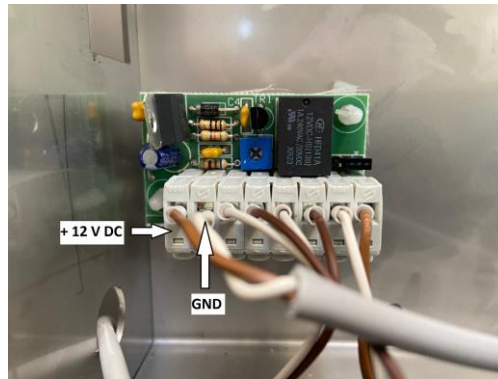


FIG.5

<b>GREEN LIGHT BLINKING</b>	
<b>CAUSE</b>	<b>SOLUTION</b>
BROKEN PHOTODIODES	PLEASE APPROACH THE TWO PHOTODIODES ( FIG 6 ) IF THE LIGHT IS STILL BLINKING PLEASE CHANGE THE PHOTODIODES
BROKEN CARD	PLEASE APPROACH THE TWO PHOTODIODES ( FIG 6 ) IF THE LIGHT IS STILL BLINKING PLEASE CHANGE THE CARD



FIG 6



