

ANOMALY: RED BLINKING LIGHT ON PANNOMATIC 2018

1. THE PHOTODIODES CAN'T READ THE CLOTH WICH PASSES IN FRONT OF THEM.
2. THE MACHINE CRASHES AND IT DOESN'T ACCEPT CREDIT ANYMORE. IN ORDER TO REACTIVATE THE MACHINE, PLEASE REMOVE AND GIVE THE ALIMENTATION BACK.

IMPORTANT

DURING THE PHOTODIODES CHECKING, SOME CREDIT NEEDS TO BE INSERTED IN THE MACHINE (green steady light).

RED BLINKING LIGHT	
CAUSES	SOLUTIONS
DIRTY PHOTODIODES	CLEAN THE PHOTODIODES AND THE TRANSMITTER PHOTODIODE'S SUPPORT HOLE (WHITE)



FIG 1



FIG 2



FIG 3



FIG 4

CAUSES	SOLUTIONS
PHOTODIODES OUT OF ORDER	BRING THE PHOTODIODES CLOSER TO EACH OTHER (FIG. 5). IF THE LIGHT KEEPS BLINKING, PLEASE CHANGE THE PHOTODIODES.
BOARD OUT OF ORDER	BRING THE PHOTODIODES CLOSE TO EACH OTHER (FIG. 5), IF THE LIGHT KEEPS BLINKING, PLEASE CHANGE THE BOARD.



FIG 5

CAUSES	SOLUTIONS
PHOTODIODES' BOARD UNPOWERED	CHECK WITH THE TESTER THE POWER 12 V DC (SEE THE ELECTRIC DIAGRAM)
PHOTODIODES' BOARD UNPOWERED	CHECK THE PROPER FUNCTIONING OF THE TOKEN ACCEPTOR POWER BOARD (SEE THE ELECTRIC DIAGRAM).
PHOTODIODES' BOARD UNPOWERED	CHECK THE PROPER FUNCTIONING OF THE Q8 OUTPUT ON THE LOGO EXPANSION (SEE THE ELECTRIC DIAGRAM).


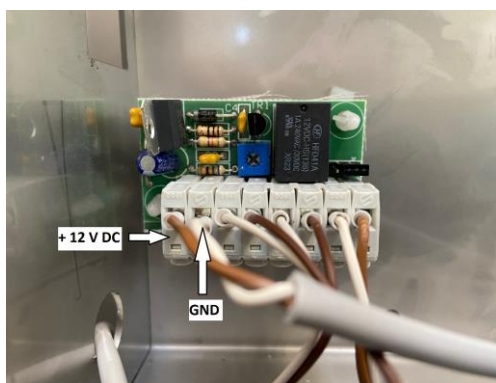


FIG.6

CAUSES	SOLUTIONS
THE PHOTODIODES CAN'T READ THE CLOTH	ADJUST THE BOARD'S POTENTIOMETER



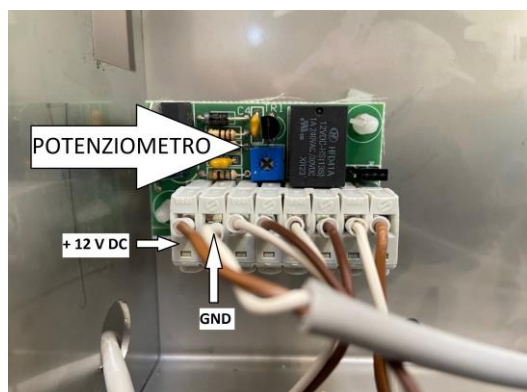

pannomatic 2017
con foto diodi e mic



pannomatic 2017
con foto diodi e mic

ELECTRIC DIAGRAM

